



Installation Instructions for the iM Manual PRV (Pressure Relief Valve) Option

- Place the O-Ring onto the PRV and press into the Large Hole in the Front of the Case.
- Attach with the PRV Screw using a 7/64" Allen Wrench.
- Turn the Valve fully Counter-clockwise to Seal and Clockwise to Vent.